

Troubleshooting Guide

- [My node cannot connect to others](#)
- [My messages are not getting through](#)
- [My battery drains too fast](#)
- [My solar node keeps going offline](#)

My node cannot connect to others

Work through these checks in order.

1. **Verify antenna is connected.** Most common cause. Transmitting without an antenna can also permanently damage the PA.
2. **Verify modem preset matches.** Two nodes on different presets are invisible to each other. Check [Meshtastic app](#) - Radio Config - LoRa - Modem Preset. Ask your local community which preset they use.
3. **Verify channel name and PSK match.** Wrong credentials mean your messages are encrypted to a key nobody else has. Verify against local network documentation.
4. **Verify frequency band.** US/Canada = 915 MHz hardware. EU = 868 MHz hardware. These cannot interoperate. Many AliExpress boards ship as 868 MHz by default.
5. **Check if other nodes are in range.** Visit [meshmap.net](#) to see nearby nodes. In rural areas you may genuinely be out of range.
6. **Verify the radio is transmitting.** Check for LoRa init errors in the serial console. A working node shows increasing packet counts in the app.
7. **Factory reset and reconfigure.** If all else fails, reset and start configuration fresh.

My messages are not getting through

First: identify the failure mode

- Node visible in list but messages do not arrive: routing or range issue
- Node does not appear in list at all: preset, channel, or range issue (see previous page)

Hop count too low

If hop count is 1, you can only reach nodes in direct radio range. Increase it (Meshtastic: Radio Config - LoRa - Hop Limit, default 3 is fine for most networks).

Network congestion

If channel utilization exceeds 25% (visible in [Meshtastic app](#)), packets are colliding. Reduce your broadcast intervals for position and telemetry.

ACK failures

Meshtastic uses ACKs to confirm delivery. No ACK means the destination node may be offline or out of range. Check its last-heard timestamp.

Recently joined node

New nodes may not have propagated throughout the mesh yet. Wait 5-10 minutes after joining before expecting full connectivity.

MeshCore specific

MeshCore requires successful route discovery before first contact. If intermediate repeaters are offline, the route cannot be established. Check that all repeaters in the expected path are online.

My battery drains too fast

Step 1: Measure actual power draw

Use a USB inline power meter to measure real current draw. This immediately shows whether you have a software config problem or a hardware issue.

Expected draw by hardware

Hardware	Typical active draw
ESP32 (T-Beam, Heltec), no display, no BT	40-55 mA
ESP32 with OLED display on	+20 mA
nRF52840 (RAK4631, T-Echo, T114)	8-15 mA

Power drain checklist

- Screen on? Set timeout to 0.
- Bluetooth enabled? Disable if not needed.
- GPS polling? Disable or set a long interval.
- WiFi enabled (ESP32)? Disable.
- Position broadcast interval too short? Set to 30+ minutes on battery.

Battery sizing

Battery (mAh) divided by draw (mA) = hours of runtime. 1000 mAh at 40 mA = 25 hours; at 10 mA = 100 hours. Switching from ESP32 to nRF52840 hardware typically gives 4x longer life on the same battery.

My solar node keeps going offline

Systematic diagnosis in order of likelihood:

1. **Undersized battery or panel.** Goes offline at night or on cloudy days? Review the [Solar System Sizing Guide](#) and resize.
2. **Panel obstruction.** Bird droppings, snow, or vegetation growth. Verify the panel is clean with clear sky access.
3. **Charge controller LVD setting.** If the low-voltage disconnect threshold is too high, the controller cuts power while charge remains. For LiFePO4: $LVD = 3.0V/cell$ (12.0V for 12V system).
4. **Water ingress.** Goes offline after rain = water ingress. Inspect all cable glands, connector weatherproofing, and enclosure seals.
5. **Thermal shutdown.** Sealed enclosures in direct sun reach 70-80 degrees C. Add venting, shading, or a radiation shield.
6. **Firmware hang.** Check for firmware updates. Enable hardware watchdog if supported.
7. **Remote monitoring.** Watch battery voltage trend via Meshtastic telemetry. Declining trend = insufficient harvest. Sudden drop to zero = hardware failure.